

To **enter programming** (master code) :
press 0000 *

To change the **user mode** to :
Single user mode : 8900 #
Multi user mode : 8901 #

To change **master code** in **single user mode** :
press 0 xxxx #
where x is the desired new user code, 4 digits fixed

eg. To change master code to 1234
press 1 1234 #

To change **user code** in **single user mode** :
press 1 xxxx #
where x is the desired new user code, 4 digits fixed

eg. To change user code to 3388
press 1 3388 #

To change **master code** in **multi user mode** :
press 0 xxxx #
where x is the desired new user code, 4 to 8 digits

eg. To change master code to 4321
press 1 4321 #

To change **user code** in **multi user mode** :
press 1 yy xxxx #
where y is the user location number, from 00 to 99
where x is the desired new user code, 4 to 8 digits

eg. To change 1st user code to 2323
press 1 01 2323 #
To change 32nd user code to 9876
press 1 32 9876 #

To change the **lock release duration** :
press 40 xx #
where x is the desired duration, from 1 to 999

eg. To change duration to 10 seconds
press 40 10 #

To **exit programming** :
press *