

Default master code : 1234

Default user code : 123

User Operations :

To arm the system :

press 123 #

To arm the system in HOME mode :

press 123 HOME #

To bypass zones :

press 123 ISOLATE 4 6 # (to bypass zone 4 & 6)

To clear alarm memory :

press 123 * 3 #

Programmings :

To enter into programming mode :

press 1234 **

To change user code :

press 11 xxxx #

where x is the desired new user code, 2-5 digits

eg. To change user code to 8866

press 11 8866 #

To change contact phone number :

press 601 xxx xxxxxxxx # (1st no.)

press 611 xxx xxxxxxxx # (2nd no.)

press 621 xxx xxxxxxxx # (3rd no.)

press 631 xxx xxxxxxxx # (4th no.)

where x is the mobile phone number

eg. To change 1st contact number to 012-345 6789

press 601 012 345 6789 #

To exit programming :

press **